INSTALLATION DETAILS (WOOD-FIRED TUBS)

FOUNDATION REQUIREMENTS

The Tubmarine needs a level stable base. This can be a concrete slab, paving slabs, timber decking or concrete. The base must be at least the size of the tub footprint.

DRAINING THE TUB

The tub can be connected to a drain or soak-away. Alternatively a hose can be connected and the grey water used to water your garden.


2038mm

WATER CONNECTION

The water connection can be positioned under the tub or, if this isn't possible, a hose connection can be added to the outside of the tub. The required position must be specified on order.

THE INSTALLATION TEAM

Our installation team need good access to the site. Providing a short video clip of the nearest parking area to the tubs end position will help us pre-empt any issues and avoid any delays to the installation. Minimum access width is 1.6 metres.

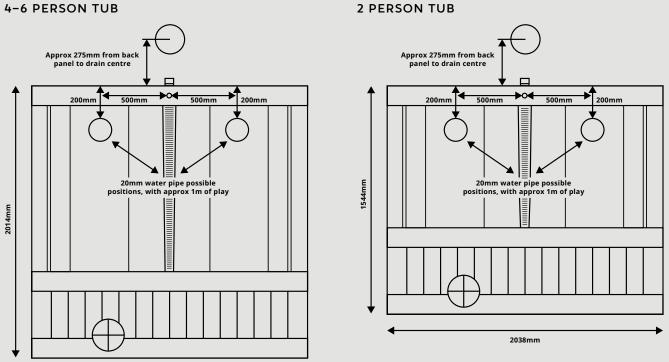

2 PERSON TUB

